


20' x 20' Pinnacle Setup Instructions
Parts Layout



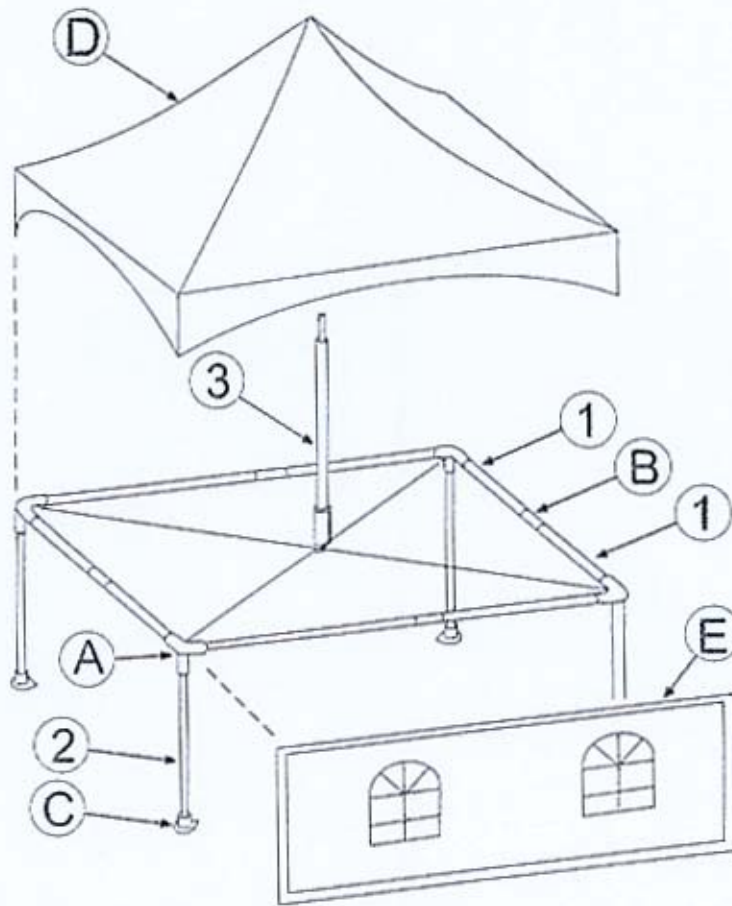


2081 VAN HORN RD. #2
FAIRBANKS, AK 99701
PHONE: (907) 455.7712
FAX: (907) 455.7713

20' x 20' Pinnacle Setup Instructions




PARTS		QUANTITY
1		5
2		4
3		1
A		4
B		4
C		4
		2
		4
		8
		4
D		1
E		4
		1

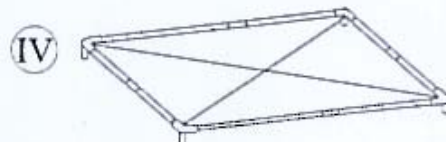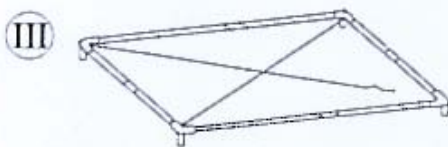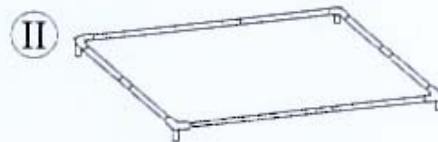

2081 VAN HORN RD. #2
 FAIRBANKS, AK 99701
 PHONE: (907) 455.7712
 FAX: (907) 455.7713

20' x 20' Pinnacle Setup Instructions

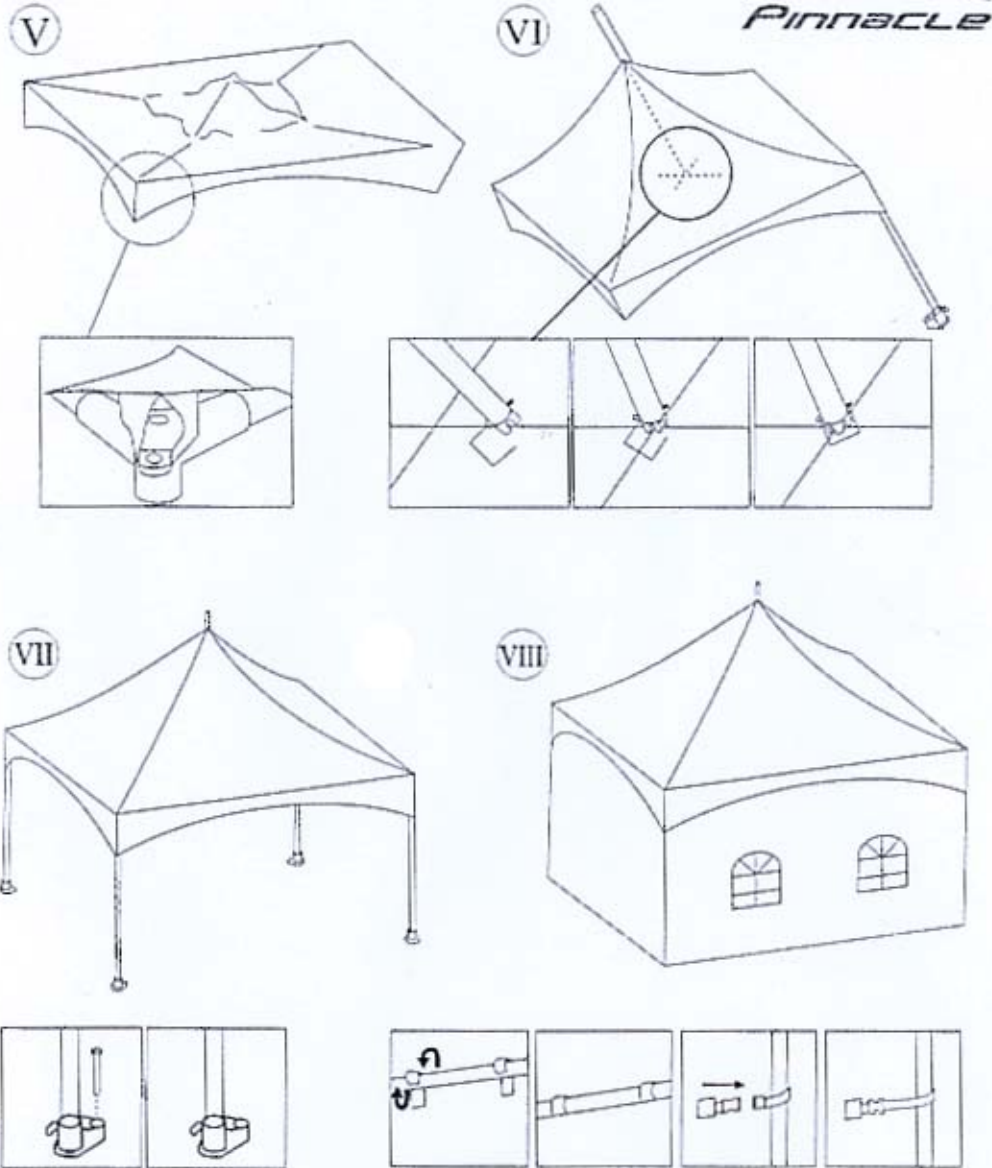


2081 VAN HORN RD. #2
FAIRBANKS, AK 99701
PHONE: (907) 455.7712
FAX: (907) 455.7713

20' x 20' Pinnacle Setup Instructions



(IX)

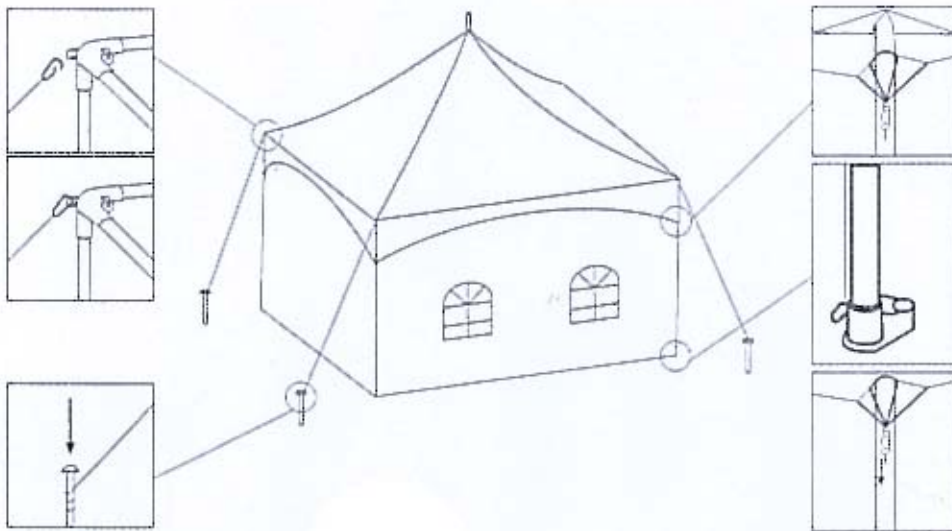

2081 VAN HORN RD. #2
FAIRBANKS, AK 99701
PHONE: (907) 455.7712
FAX: (907) 455.7713

20' x 20' Pinnacle Setup Instructions

Check to make sure you have all parts required

Parts List

Box 1 of 4

Tent Top
4 Ratchet Buckle Straps (1")

Box 2 of 4

2 Cross Cables
4 Rope Ratchet Locks
4 Corner Fittings
4 Base Plates

Box 3 of 4

4 Alum 8' Legs
4 Alum 15" Spreader Inserts
1 Center Mast Top Pin
8 Steel Anchoring Pins

Box 4 of 4

8 Alum 9'3" Spreaders
1 Alum Center Mast Pole



- 1) Lay out a drop cloth in the area the tent will be installed.
 - a. Drop Cloth Sold Separately, not included in tent package.
- 2) Lay out all parts in their respective positions forming a square on top of the drop cloth.
- 3) Start in the middle of one side by connecting both ends of the 15" spreader insert to each of the 9'3" spreader tubes. Continue this until all four sides are completed (See Diagram: I).
- 4) Starting at a corner, insert the spreader tube (9'3" connected tube) into the corner fitting.
- 5) Continue to insert all spreaders into the corner fittings until a square is formed.
- 6) Connect one cross cable to the inside hook on the corner fitting. Connect the other end of this cable to the hook on the corner fitting at the diagonal corner.
- 7) Connect the second cross cable to the remaining two corner fittings in the same way
 - a. In order to fit the cable onto the 4th corner fitting hook, you may need to lift the frame up in that corner approximately 4 feet. This reduces the distance between the corners allowing the cable to reach the 4th corner fitting hook (See Diagram: III).
- 8) Lay the tent top out over the cables and frame with the top of the tent facing upward. Start in one corner by securing the white nylon strap over the ring on the outside of the corner fitting (See Diagram V).
- 9) Continue to secure all the tent corner straps to the outside corner fittings. Make sure that the strap with the ring on it is the last one to be secured. You will use this ring and strap when securing the top over the last fitting.
- 10) Once the top is in place and secured, you're ready to install the legs. Lift one side of the tent up and install the legs (8') at each corner, leaving the tent at an angle (See Diagram: VI).



2081 VAN HORN RD. #2
FAIRBANKS, AK 99701
PHONE: (907) 455.7712
FAX: (907) 455.7713

20' x 20' Pinnacle Setup Instructions

- 11) After two legs are installed, you need to install the center mast through the tent top. Place the center mast pin at the top of the center mast pole. Unhook the clip at the bottom of the center mast pole and position the bottom of the center mast pole onto the cables. Slide the center mast pole up the cables making sure the mast pin at the top goes through the hole and is visible from the outside of the tent top. Move the center mast pole to the center of the tent making sure it rests on both cross cables. Once in place put the clip back on the bottom of the center mast pole making sure it is under the cables to keep it in place (See Diagram: VI).
- 12) Install the remaining two legs (8') as done in step #10
- 13) Place the base plates in the desired locations with the smaller holes facing the interior of the tent (You can either drive the pins while the legs are in the base plate holes or insert the legs into the base plate holes after you have driven in all the pins, keep in mind the base plates need to be square to each other). Secure each base plate by driving an anchoring pin into the smaller hole in the front of the base plate. Place the four legs (8') into the larger hole of the base plate once the plates have been installed (See Diagram: VII).
- 14) Your tent should now be erected and you're ready to tension the tent top. Start at one corner and using a ratchet rope lock, place the tension rope from the tent top into the oval shaped ring on the rope lock. Screw the oval ring back in place after the rope is secured inside. Tie a loop knot in the open ended rope at the bottom. Place this loop on the hook in the base plate and pull the rope to tighten the ratchet putting tension on the tent top. Continue this step for all four corners until the tent top is tight (See Diagram: IX).
- 15) Drive the remaining 4 anchoring pins into the ground approximately 4' to 5' at an angle from the base plates. For best results, the top of the stakes should only be approximately 4" above the ground (See Diagram: IX).
- 16) Using the 1" ratchet buckle assemblies, secure the top hook to the ring on the outside of the corner fittings (the same ring that the tent top is secured to). Install the ring end of the ratchet by pulling the strap through the ring to form a loop. Put the loop over the anchoring pin and pull it tight. Click the ratchet to tighten the tent. (See Diagram: IX)



2081 VAN HORN RD. #2
FAIRBANKS, AK 99701
PHONE: (907) 455.7712
FAX: (907) 455.7713